


BOILER CONNECTIONS

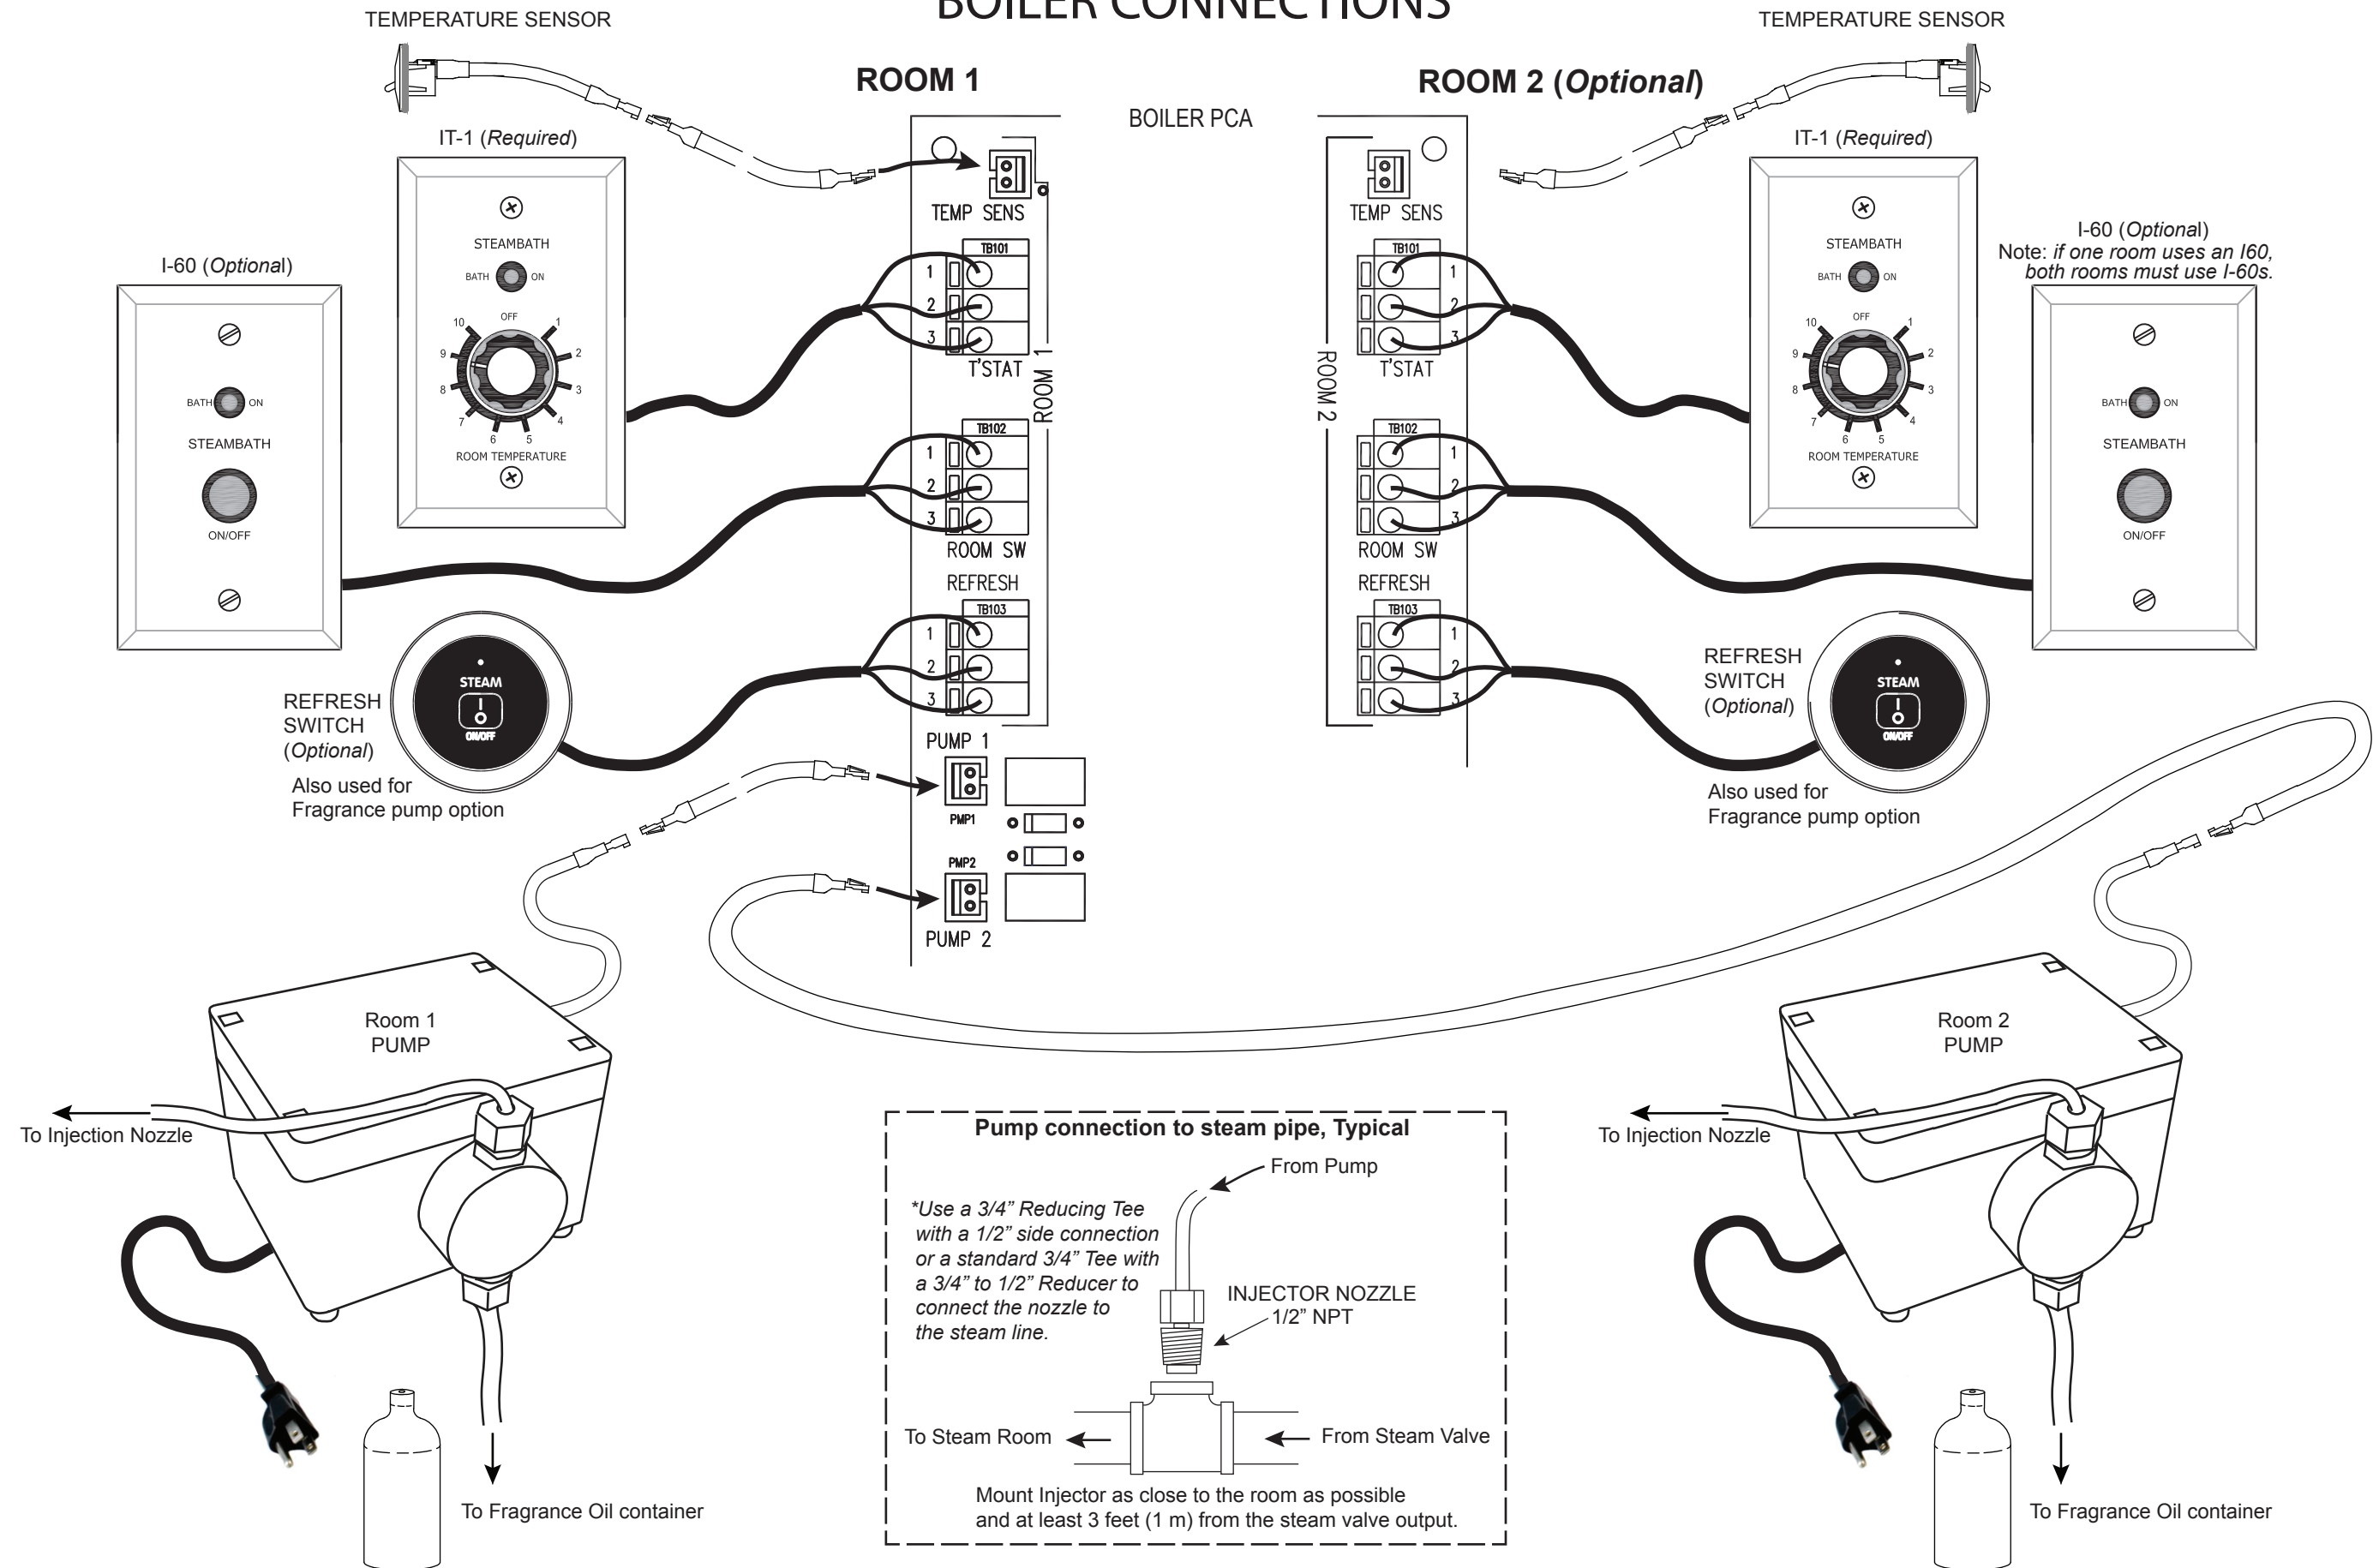

Note: the pump cycle will start whenever the Refresh switch is pressed (while the switch's light is lit)