

# THERMASOL®

Sauna & Steam

User manual  
Nordic Misty – Fence



Check the contents of the delivery without delay!  
Study the instructions carefully and keep them for future  
reference.



## Fence Small - Part List

1.		Fence S - 79" L x 52" W x 86" H	1
2.		Screw 4,2 x 75 mm	9


## Fence Large - Part List

1.		Fence L - 79" L x 79" W x 86" H	1
2.		Filler pieces (NOTE! Used only when the Fence is installed to the side wall of the pergola)	2
3.		Screw 4,2 x 55 mm	6
4.		Screw 4,2 x 75 mm	9

## GENERAL

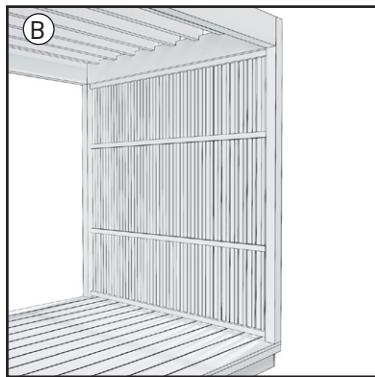
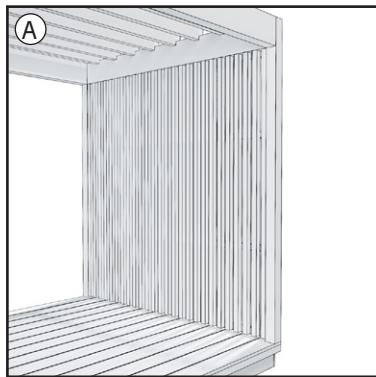


It is also possible to install the garden screen so that the battens binding the wall are on the visible side.

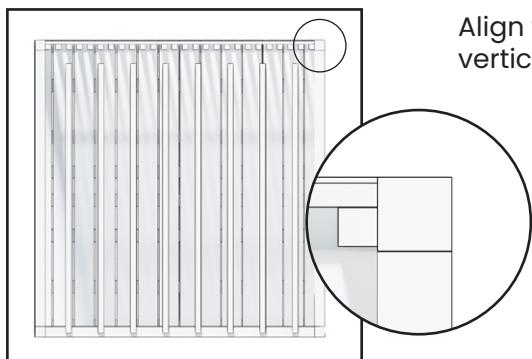

Align the garden screen approximately in the middle of the pergola's vertical posts

## ATTACHING TO THE BACK OF PERGOLA S

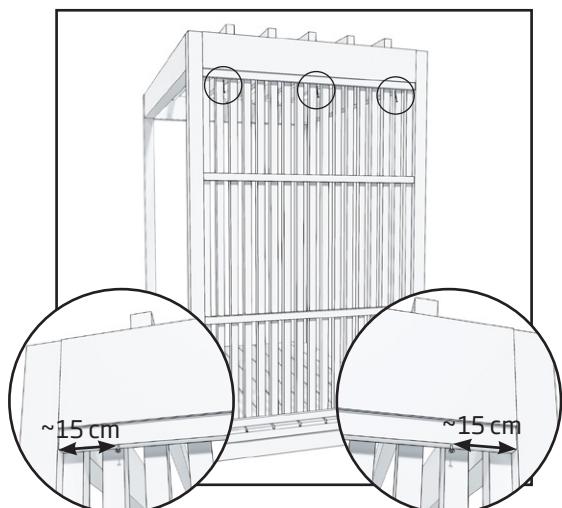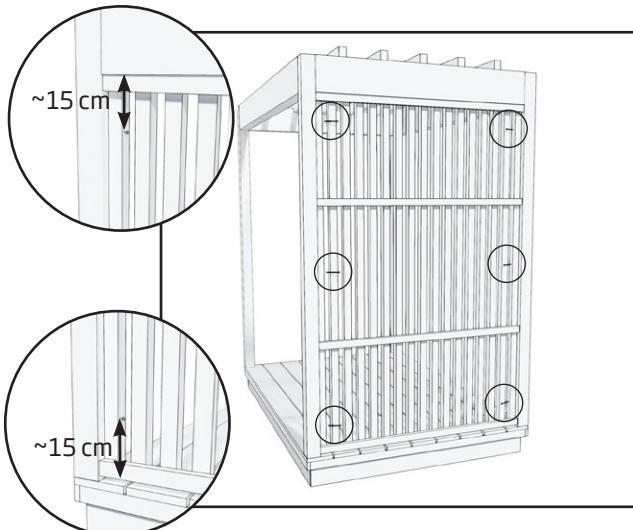


1. Attach the garden screen to both sides of the pergola vertical posts with three (4.2 x 75 mm) screws each, screwing them in from the outside of the pergola. There will be a slight gap between the privacy screen and the pergola.


2. Attach the garden screen to the top frame of the pergola with three screws (4.2 x 75 mm).

## ATTACHING TO THE BACK OF PERGOLA M

### Vertical installation:

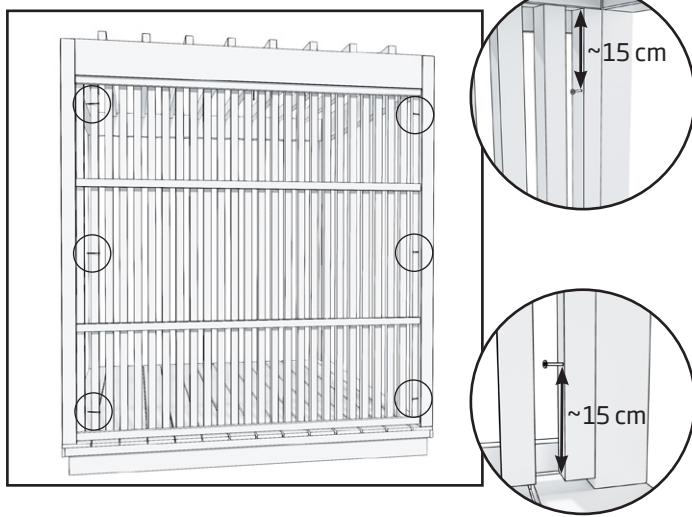


1. Attach the garden screen to both sides of the pergola vertical posts with three (4.2 x 75 mm) screws each, screwing them in from the outside of the pergola. There will be a slight gap between the privacy screen and the pergola deck.

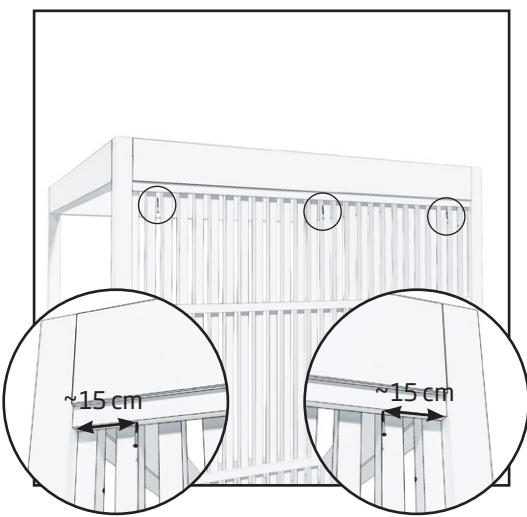


2. Attach the garden screen to the top frame of the pergola with three screws (4.2 x 75 mm).

### Horizontal installation:

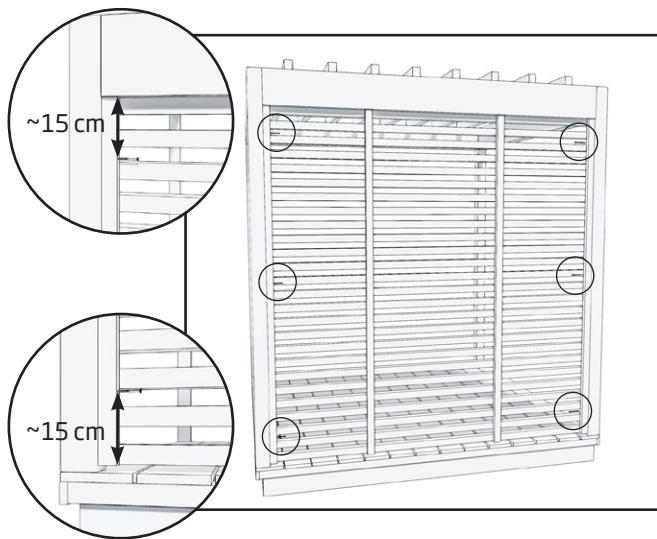

1. Attach the garden screen to both sides of the pergola vertical posts with three (4.2 x 75 mm) screws each, screwing them in from the outside of the pergola. There will be a slight gap between the privacy screen and the pergola deck.

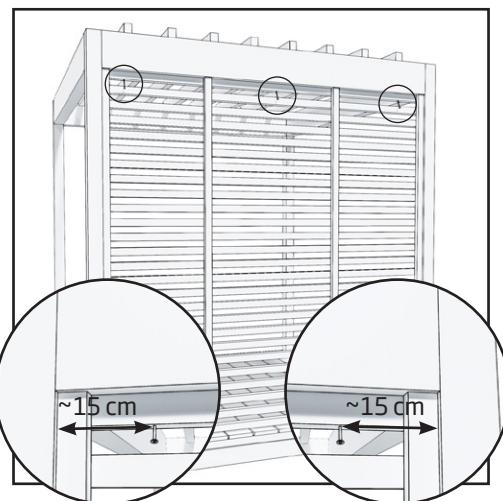


2. Attach the garden screen to the top frame of the pergola with three screws (4.2 x 75 mm).


## ATTACHING TO THE SIDE OF THE PERGOLA M

The sides of the pergola are slightly wider, so filler pieces need to be installed on the privacy screen

### Vertical installation:

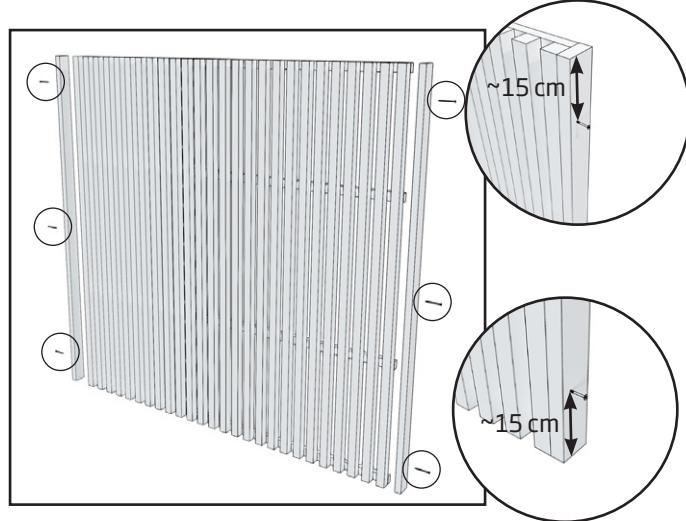


1. Attach filler pieces to sides of the garden screen with 3 screw (4,2 x 55 mm) per piece. Leave the outermost screws about 15 cm away from the edges to prevent cracking.

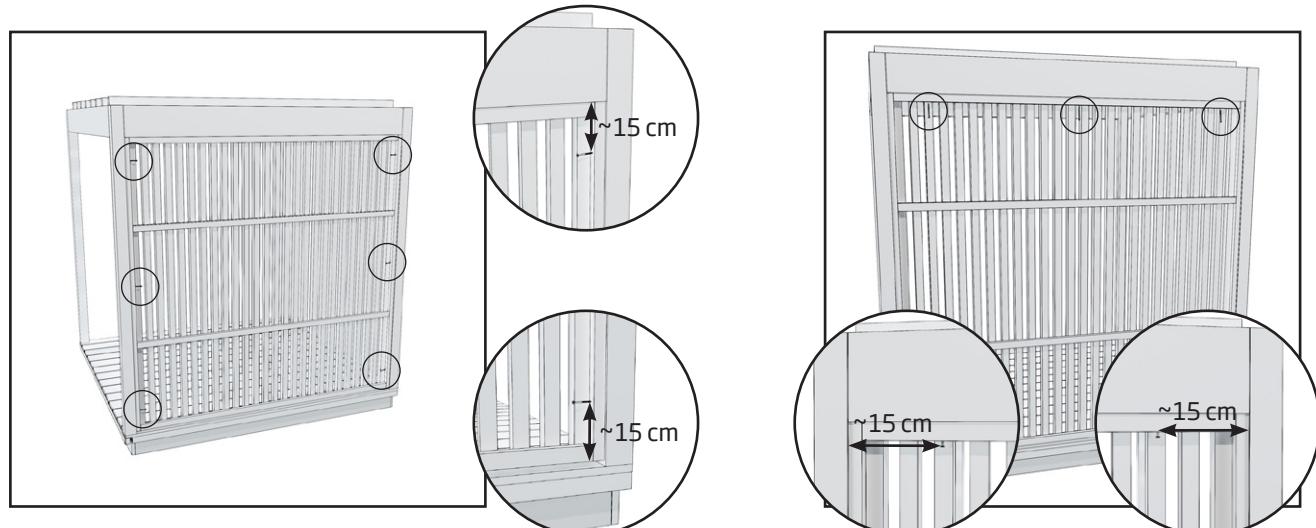


2. Attach the garden screen to both sides of the pergola vertical posts with three (4.2 x 75 mm) screws each, screwing them in from the outside of the pergola. There will be a slight gap between the privacy screen and the pergola deck.

3. Attach the garden screen to the top frame of the pergola with three screws (4.2 x 75 mm).


## Horizontal installation:

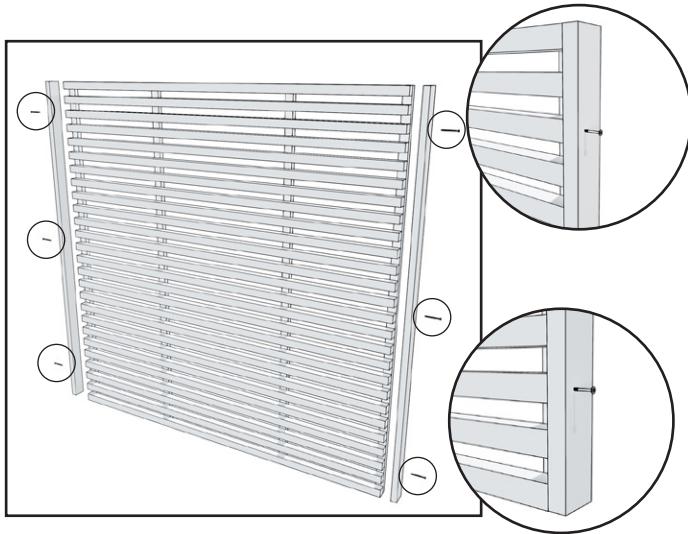

1. Attach the filler pieces to the slats on the sides of the garden screen with 3 screws (4,2 x 55 mm) per piece. Attach the outermost screws to the third slat counted from the top and bottom.

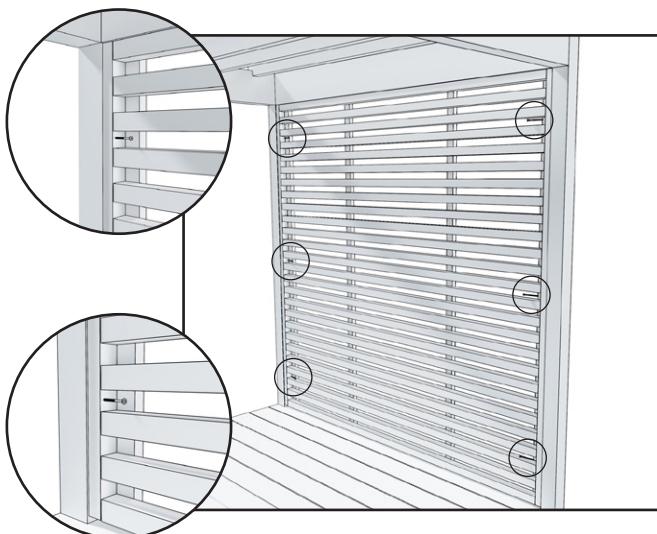

2. Attach with 3 screw (4,2 x 75 mm) per side from the back of the pergola. There will be small gap between the garden screen and the deck of the pergola.

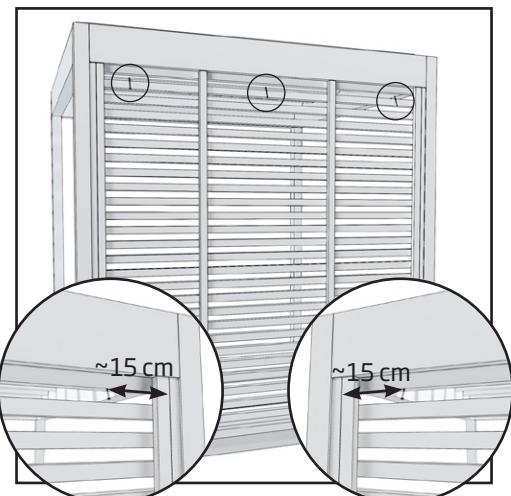

3. Attach with 3 screws (4,2 x 75 mm) to the top.

## WARRANTY

We give our product a warranty of 24 months concerning material and manufacturing defects.

The warranty is valid when the user has studied the product's instruction manual and complies with it.

NOTE! An exception to the above is the warranty period of 6 months given to products used for commercial purposes.

- The warranty does not cover any defects typical to wood materials that may occur E.g. colour changes, changes in humidity cracks forming, and similar issues.
- The warranty does not cover wear and tear due to normal use.
- The warranty does not cover damage due to user error, for example.
- The warranty does not cover frost damage, either because it can be avoided with correct use.
- The warranty does not cover any corrosion due to the use of wrong cleaning agents.
- The warranty does not cover any indirect costs, such as building or demolishing a terrace.
- Contact the seller of the product immediately regarding issues with warranties. Attempting to repair the product yourself voids the warranty

## DISPOSING OF THE PRODUCT

The metal parts of the product should be taken to metal recycling, while the wooden parts can be burned, and the glass can be taken to a glass recycling point. The other parts should be disposed of with mixed waste. In Finland, used LED lights can be returned for free and without an obligation to buy a new product to shops where lamps are a part of the usual selection, or alternatively they can be taken to a recycling point.